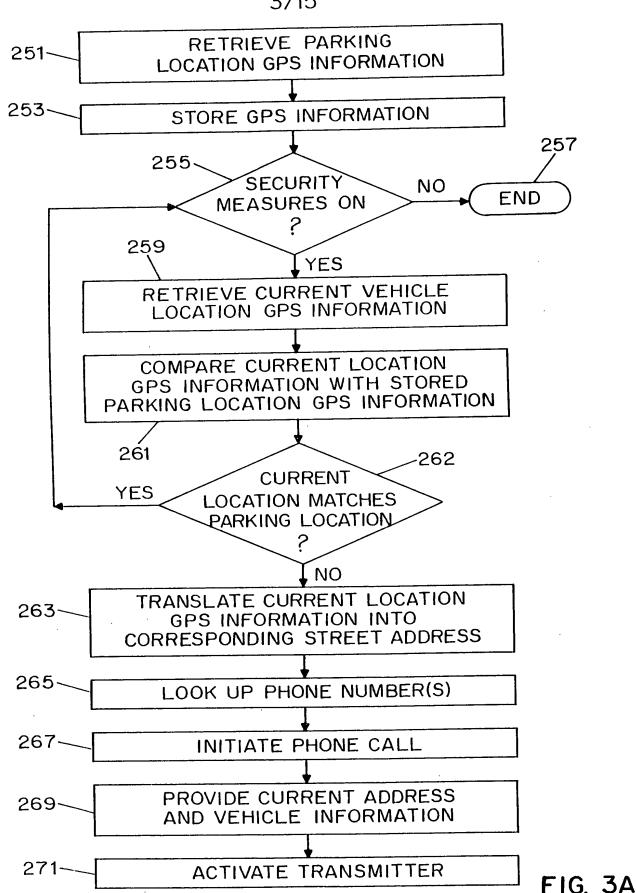



dist.

Deforose of the control

3/15





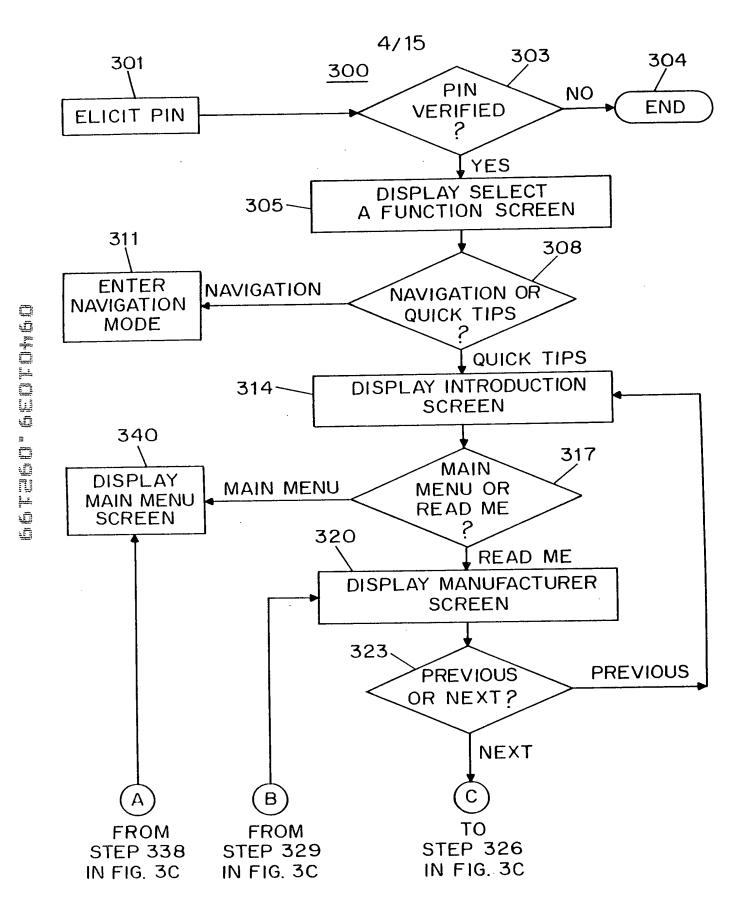


FIG. 3B

estmen, etatoro

5/15

FIG. 3C

6/15

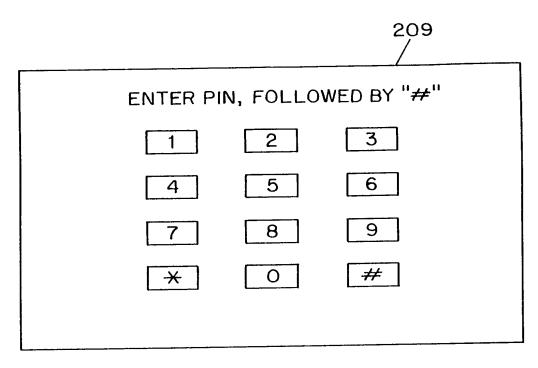


FIG. 4A


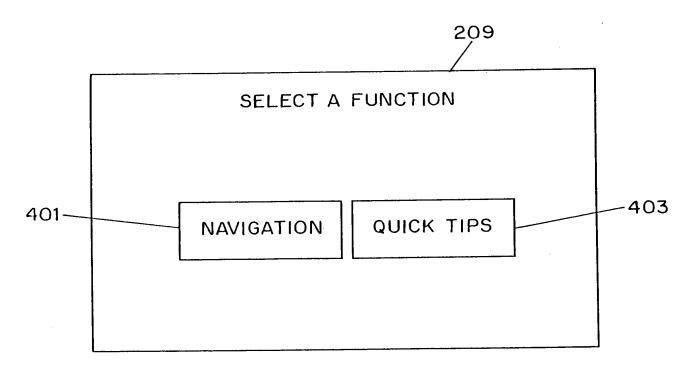


FIG. 4B

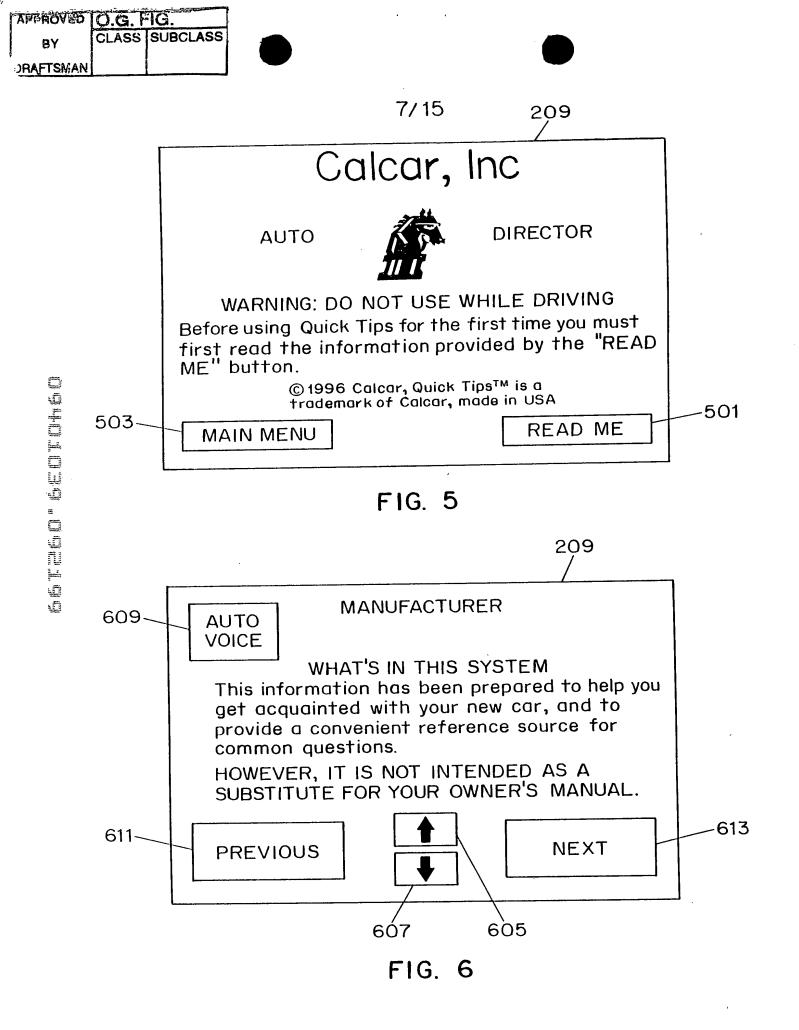

CETTORS CORCTORED

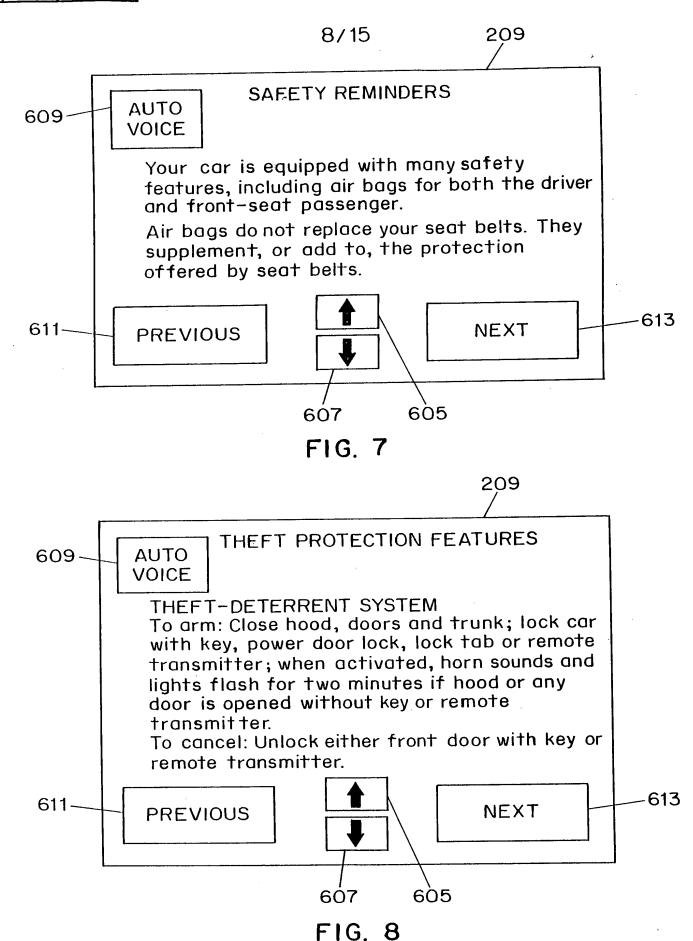


FIG. 10

10/15

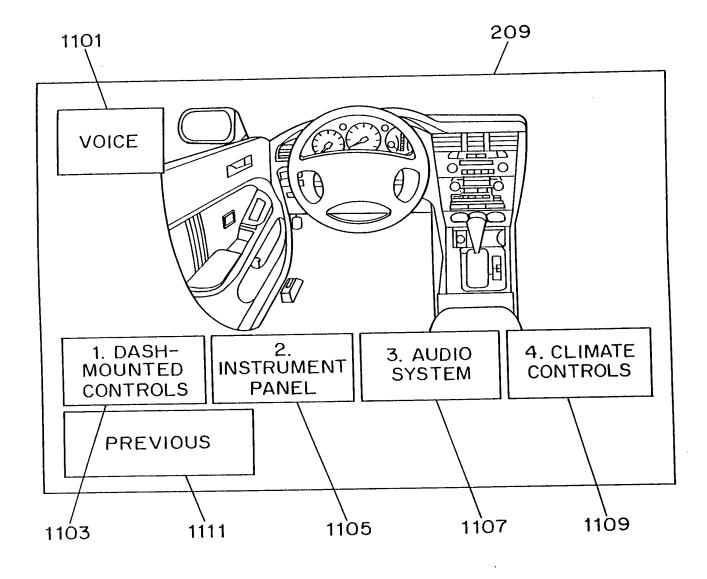


FIG. 11

GOTEO. CECTOTEC

11/15



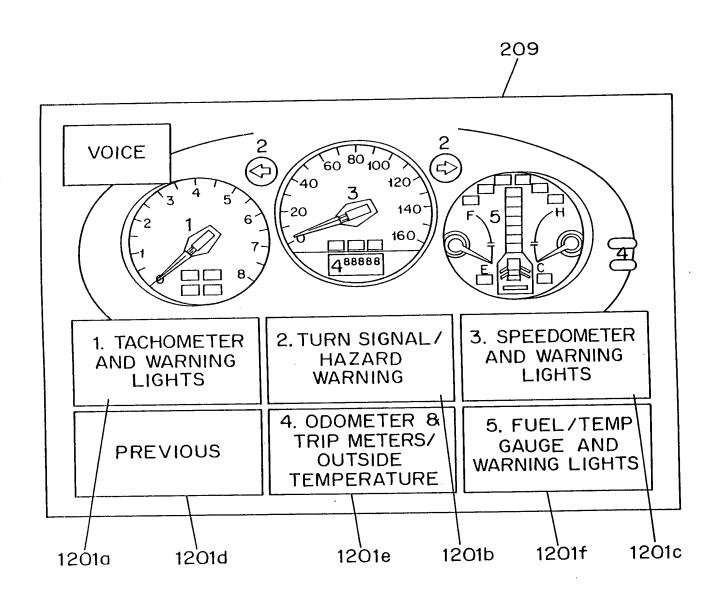


FIG. 12

PREVIOUS 1405 FIG. 14


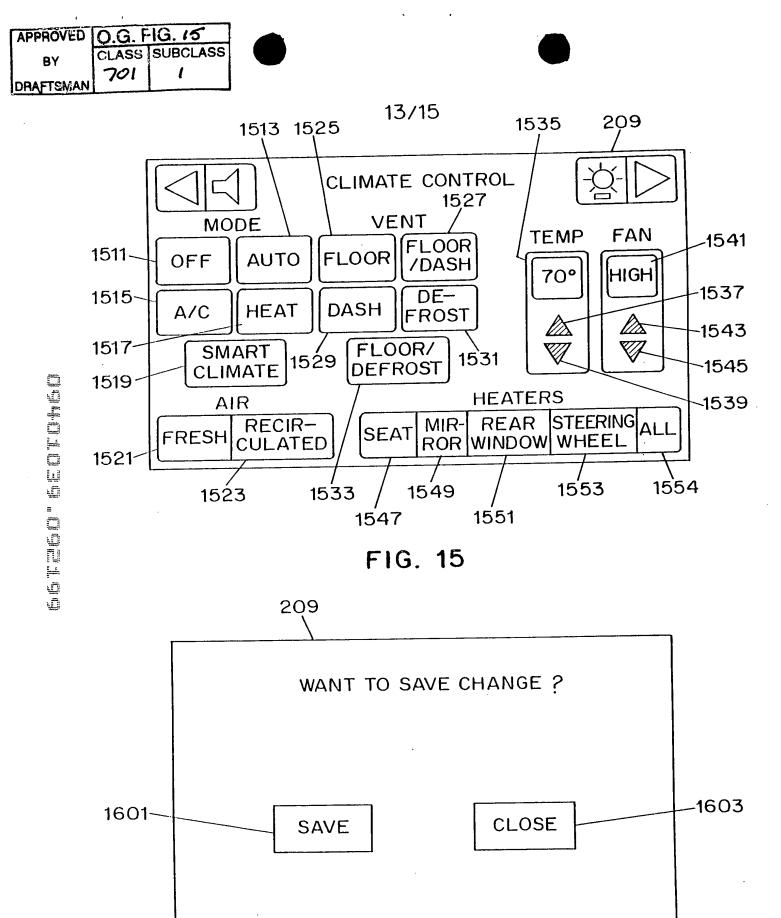


FIG. 16

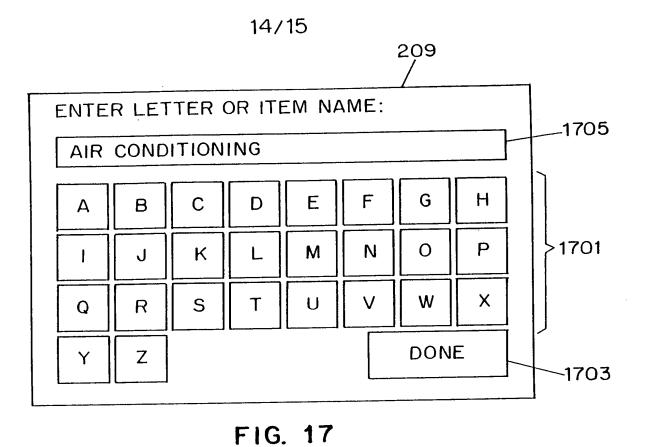

INDEX

AIR CONDITIONING

ANTI-LOCK BRAKE SYSTEM INDICATOR

AUTOMATIC CLIMATE CONTROL

AUTOMATIC TRANSMISSION

SHIFT LEVER POSITION INDICATOR

1805

PREVIOUS

1801

FIG. 18

1803

APPROVED	O.G. FIG.					
BY	CLASS	SUBCLASS				
DRAFTSMAN						

estada escrote

ř.
7

_				•	15/	15					- • •
1903	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15 LINK TO WARNING LIGHT OPTION #4 ON FUEL/TEMP SCREEN (NOT SHOWN)	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	• • •	LINK TO CHARGING SYSTEM FAILURE OPTION 1309f (FIG. 13)	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	LINK TO WARNING LIGHT OPTION #2 ON SPEEDOMETER SCREEN (NOT SHOWN)	LINK TO CLIMATE CONTROL SCREEN OF FIG. 15	LINK TO WARNING LIGHT OPTION #7 ON FUEL/TEMP SCREEN (NOT SHOWN)	LINK TO TURN SIGNAL/HAZARD WARNING OPTION 1201b (FIG. 12)	• •
1901	AIR CONDITIONING ANTI-LOCK BRAKE SYSTEM INDICATOR		•••	CHARGING SYSTEM FAILURE INDICATOR	CLIMATE CONTROL SYSTEM	COOLING	CRUISE CONTROL INDICATOR	DEFOG/DEFROST	DOOR AJAR INDICATOR	DIRECTIONAL SIGNALS INDICATOR	
	1905										•

FIG. 19